



MEDISCA[®]
YOUR TRUSTED PARTNER IN COMPOUNDING

PRODUCT NO.: 6017



MD™ Primer

DESCRIPTION: Manual priming device compatible with all MD™ pumps, this device will push air in from the bottom of the pump in order to raise the pumps internal piston.

FEATURES:

- ✔ Speeds up priming process
- ✔ Maintenance free


INSTRUCTIONS:

1. Place MD Dispenser on Primer and firmly push down until the bottle reaches the bottom of the Primer or when contents reaches the bottom of the dispenser. Repeat the process if the bottle is not primed on the first try. (Note: Some bottles require that you press and hold down the actuator during priming. Careful to not over prime a bottle)
2. MD Dispenser bottle is now ready to be given to the user. The actuator may still need to be pumped a few times by the user to dispense the contents the first time the dispenser is used.

Unprimed Bottle



Primed Bottle

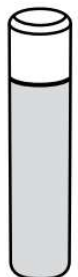

WARRANTY: 6 months